

ENGLISH VERSION User Guide

1. Because we care of you

Thank you for purchasing this product. This product has been designed and assembled with utmost care for you and the environment. This is why we supply this product reducing the amount of paper (pages) and therefor save trees to be cut for making this paper.

2. Important safety instructions

When using your telephone, basic safety precautions should always be followed to reduce the risk of fire, electric shock and injury, including the following:

- Position your telephone on a flat non-slippery surface.
- The telephone cable should be kept out of the way in order to prevent accidents.
- Prevent placing telephone base close to other electronic devices or sources of heat.
- Do not expose the phone to direct sunlight.
- Protect your phone from dust, humid conditions, liquids and corrosive vapors.
- Clean your phone by only using a clean damp cloth.
- Use only the telephone line and power adapter provided with your telephone.

Never:

- Never take apart or open your telephone.
- Never touch the internal parts or cables with a sharp metal objects.
- Never carry your phone hanging from line or adapter cables.
- Never use your telephone in high humidity environments such as bathroom, laundry, etc.

3. General information

Keep your registration and original dated sale receipt in a safe place. To get warranty service on your product, you must provide us with a copy warranty.


For more information, additional doubts or questions, please call us:

MÉXICO 0-800-021-0000
COLOMBIA 01-800-700-1504
VENEZUELA 0800-100-4289
CHILE 800-201-4442
ECUADOR 1-800-10-2020
PARAGUAY 009-800-542-0030
URUGUAY 0004-0178-7011
COSTA RICA 0800-016-1031
ARGENTINA 0800-666-8876

4. Package content

Package content	Quantity		
	M700/M700W	M700-2	M700-3
Handset	1	2	3
Main base	1	1	1
Charging base with power supply	-	1	2
Power supply	1	1	1
Telephone line cable	1	1	1
Battery	2	4	6
User guide	1	1	1

5. Getting to know your telephone

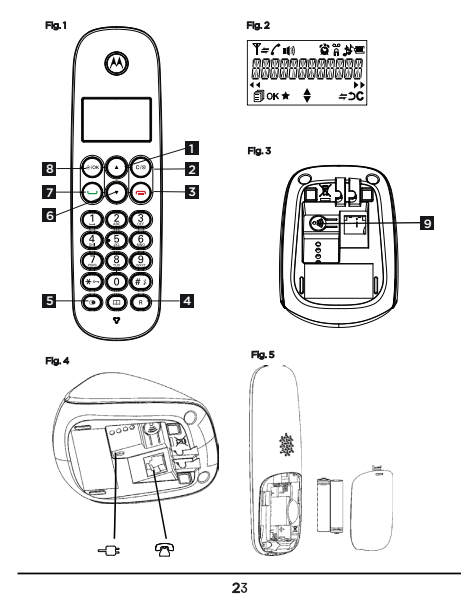

The handset (see Fig. 1 in page 5)

#	Meaning
1	Up arrow <ul style="list-style-type: none"> • In stand by: press to enter the call log • In menu mode: press to scroll up the menu items • In phonebook list / redial list / call list: press to scroll up the list • During a call: press to increase the earpiece volume • During ringing: press to increase the ringer volume
2	Right arrow button (erase / back / mute / intercom) <ul style="list-style-type: none"> • In main menu mode: press to go back to idle screen • In sub-menu mode: press to go back to previous level • In sub-menu mode: press and hold to go back to idle screen • In editing / predialling mode: press to clear a character/ digit • In editing / predialling mode: press and hold to delete all characters / digits • During a call: press to mute / unmute the microphone • In idle mode: press to intercom another handset
3	Turning off / End a call <ul style="list-style-type: none"> • During a call: press to end a call and go back to idle screen • In menu / editing mode: press to go back to previous menu • In idle mode: press and hold to power off handset • In idle mode with handset off: press and hold to power on the handset
4	Flash key <ul style="list-style-type: none"> • In idle / predialling mode: press to insert a flash • During a call: press to generate flash signal

5	Redial list key <ul style="list-style-type: none"> • In idle mode, press to access the redial list.
6	Down key (redial / down) <ul style="list-style-type: none"> • In idle mode: press to access the redial list • In menu mode: press to scroll down the menu items • In phonebook list / redial list / call list: press to scroll down the list • During a call: press to decrease the earpiece volume • During ringing: press to decrease the ringer volume
7	Talk key <ul style="list-style-type: none"> • In idle / predialling mode: press to make a call • In redial list / call list / phonebook list: press to make a call to the displayed entry • During ringing: Press to answer a call
8	Left soft key (menu / ok) <ul style="list-style-type: none"> • In idle mode: press to access the main menu • In sub-menu mode: press to confirm the selection • During a call: press to access Intercom/phonebook / redial list / call list

Display icons and symbols (see Fig. 2 in page 5)

The LCD display gives you information on current status of the telephone.

	Definition
	Steady when the handset is in range of the base. Flashes when out of range of the base or not registered to the base.
	Steady when an intercom call is in progress. Flashes when there is an incoming internal call.
	Indicates a call is in progress on that handset.

25

Adding a new phonebook entry In idle: • Press and to select PHONEBOOK and then press OK or press to access the phonebook. • Press OK to show ADD. • Press OK and then enter the name. • Press OK and then enter the number. • Press OK and to select the desired ringtone for your phonebook entry. • Press OK to store the phonebook entry.	Searching for a phonebook entry In idle: • Press and to select PHONEBOOK and then press OK to access the phonebook or by pressing . • Presione y para seleccionar el contacto deseado en el directorio. • Presione OK y para seleccionar ELIMINAR. • Presione OK para confirmar, y el contacto será borrado de su lista.
Deleting a phonebook entry In idle: • Press and to select PHONEBOOK and then press OK to access the phonebook or by pressing . • Presione y para seleccionar el contacto deseado en el directorio. • Presione OK y para seleccionar ELIMINAR. • Presione OK para confirmar, y el contacto será borrado de su lista.	Deleting a phonebook entry In idle: • Press and to select PHONEBOOK and then press OK to access the phonebook or by pressing . • Presione y para seleccionar el contacto deseado en el directorio. • Presione OK y para seleccionar ELIMINAR. • Presione OK para confirmar, y el contacto será borrado de su lista.

9. Call identification (Network dependent)

This feature is available if you have subscribed to the call line identification service with your network service provider. Your phone can store up to 10 received calls with date/time information in the call list. The number will be shown on the handset display when the phone is ringing. If the number matches with one of the entries in your private phonebook, the caller's name stored in the private phonebook will be displayed alternately with the number, and the handset will ring with the ringtone associated with that phonebook entry. If the call is from someone who withheld their number, WITHHELD will be displayed.

31

	Indicates that the handset ringer is switched off.
	Steady when an alarm is set. Flashes when the alarm is sounding.
	Indicates that the keypad is locked.
	Indicates when you have a new Voice Mail message. (This is a caller display service from the network operator.)
	Indicates when the battery is fully charged. Whole icon flashes when the battery is charging. Internal block icon flashes when the battery is in final charging stage.
	Indicates when the battery needs charging. Flashes when low battery power level is detected.
	Indicates when there are more characters or numbers in front of those being displayed.
	Indicates when there are more characters or numbers after those being displayed.
	Left soft key function. Press to access the main menu.
	Left soft key function. Press to confirm the current selection.
	Indicates new call in call list.
	Indicates more options available in lists, above or below.
	Right soft key function. Press to start an intercom call.
	Right soft key function. Press to go back to the previous menu (back) level or cancel the current action.
	Right soft key function. Press the alarm or mute/unmute the microphone during a call.

26

Viewing the call list All received calls are saved in the call list with the latest call at the top of the list. When the call list is full, the oldest call will be replaced by a new call. Any unanswered calls which have not been viewed are marked with a at the center of the bottom line of the display. <ul style="list-style-type: none"> • Press to access the call list, or press and to show CALL LIST and then press OK. • Press to select the number or name desired. • Press to view the caller's number if applicable. • Press and to show DETAILS and then press OK to display the date and time of the call. • Press OK to go back to the previous screen. 	Deleting an entry in the call list <ul style="list-style-type: none"> • Follow steps 1 and 2 in section 9, Viewing the call list. • Press and to select DELETE. • Press OK to confirm.
10. Phone settings Your phone comes with a selection of settings that you can change to personalise your phone the way you like it to work.	Setting the handset language <ul style="list-style-type: none"> • Press and to select BS SETTINGS. • Press OK and to select LANGUAGE. • Press OK and to select the desired language. • Press OK to confirm.
Setting the base ringer melody <ul style="list-style-type: none"> • Press and to select BS SETTINGS. • Press OK and to select BS RINGER. • Press OK and to select the desired melody you want from a choice of five. • Press OK to confirm. 	

32

#	Meaning
9	Find Press to page your registered handset(s). Press and hold to start the registration process.

6. Installation

Connecting the base station (see Fig. 4 in page 5)

- Plug the power supply and line cord into the base station.
- Plug the power adapter into an electrical wall outlet and the telephone line cord into your telephone line socket.

WARNING:

Use only the provided adaptor, using other power supplies may cause a hazard or damage the phone. Install the base unit in a position where the mains adapter plug will reach an easily accessible mains socket to unplug in case needed. Never try to lengthen the mains power cable.

NOTE:

The base unit needs power for normal operation, it is not just for charging the handset batteries.

Installing and charging the batteries (see Fig. 5 in page 5)

- Place the two batteries, included with your telephone, inside the battery compartment making sure the correct polarity is properly aligned.
- Place the battery compartment cover in place and slide upwards until it snaps in closed position.
- Place the handset in the base and charge for at least 15 hours before using your telephone for the first time.
- The handset will make a short sound when it correctly placed in a telephone base or charging base.

27

Setting the ringer volume <ul style="list-style-type: none"> • Press and to select BS SETTINGS. • Press OK and to select RING VOLUME. • Press OK and to select the desired ringer volume (a total of 6 ringer volume levels including VOLUME OFF. • Press OK to confirm. 	Configuration of the handset lcd screen Usted podrá seleccionar si su pantalla muestra el nombre asignado al auricular o la actual hora cuando su teléfono esté en reposo. <ul style="list-style-type: none"> • Press OK and to select HS SETTINGS. • Press OK and to select HS DISPLAAND. • Press OK and to select TIME. • Press OK to confirm.
Configuration of the date and time <ul style="list-style-type: none"> • Press OK and to select HS SETTINGS. • Press OK and to select DATE AND TIME • Press OK and to select DATE FORMAT • Press to select the desired format for the date, (DD-MM-ANDAND o MM-DD-ANDAND). • Press OK to confirm. 	Setting up the time format <ul style="list-style-type: none"> • Press OK and to select HS SETTINGS. • Press OK and to select DATE AND TIME • Press OK and to select DATE FORMAT • Press to select the desired time format (12 HR o 24 HR). • Press OK to confirm.
Setting up the time <ul style="list-style-type: none"> • Press OK and to select HS SETTINGS. • Press OK and to select DATE AND TIME • Press OK and to select SET TIME. • Press OK for the current time information. • Press OK to confirm. 	

33

7. Telephone operation Making a call Predialling to make a call <ul style="list-style-type: none"> • Enter the phone number and press to connect to the line and dial the number. → When entering the number, if you make a mistake, press C/⊗ to delete digits. Direct dialling <ul style="list-style-type: none"> • Press to connect to the line and then enter the phone number. Calling from the phonebook <ul style="list-style-type: none"> • Press . OK to enter the phonebook, then press or to select a number. • Press to make the call to the selected number. Calling from the call list <ul style="list-style-type: none"> • Press to enter the call list and then press or to select a number from the call list. • Press to make the call to the selected number. Calling from the redial list <ul style="list-style-type: none"> • Press to enter the redial list and then press or to select a number from the redial list. • Press to make the call to the selected number. Call timer Your handset automatically times the duration of every call. The call timer is displayed as soon as you answer a call or 15 seconds after dialing and remains on the screen for 5 seconds after the end of the call. It is shown in hours, minutes and seconds format (HH:MM:SS).	Answering a call If the handset is not in its charging base: <ul style="list-style-type: none"> • Press to answer a call when there is an incoming call.
---	--

28

Setting up the date <ul style="list-style-type: none"> • Press OK and to select HS SETTINGS. • Press OK and to select DATE AND TIME. • Press OK and to select SET DATE. • Press OK for the current date information. • Press OK to confirm. 	Handset registration IMPORTANT: When you purchase your phone, all handsets are already registered to your base, so you do not need to register them. Handset registration is only necessary when you buy extra handsets or if a handset has become faulty. You can register additional handsets to have up to five handsets per base unit, with each handset's number (1 to 5) shown on its display. (Note: each handset can only be registered to one base.)
Registering handset to the base: Press and hold on the base station for more than five seconds, to put the base station into registration mode. It will stay in registration mode for about 1 minute, so the following hand-dial sequence must be completed within this time. <ul style="list-style-type: none"> • Press and to select REGISTRATION. • Press OK to display PIN?—,. • Enter the 4-digit system PIN (default 0000). • Press OK to confirm, and the display will show SEARCHING. If the handset registration is successful, you will hear a confirmation tone and the will stop flashing. 	The handset will automatically be allocated the next available handset number. This handset number is shown in the handset display in standby mode. If the handset registration is unsuccessful, the will still flash.

34

NOTE: If AUTO ANSWER is activated, then lifting the handset off the base or charger will answer the call automatically and no keys need to be pressed.	Ending a call <ul style="list-style-type: none"> • During a call, press to hang up and end the call, or • Place the handset on the base cradle and the call will be ended.
Adjusting the volume There are 5 levels, VOLUME 1 to VOLUME 5, to choose from for each of the earpiece and speaker volumes.	During a call: <ul style="list-style-type: none"> • Press to select volume 1-5. The current setting is shown. → When you end the call, the setting will remain at the last selected level.
Turning off the handset ringer In idle, press and hold to turn off the handset ringer. The icon is displayed on the LCD.	NOTE: The display will still flash the call icon and show CALL or the caller display number, when there is an incoming call, even if the ringer is turned off. To turn the ringer back on, press and hold again.
Activating the keypad lock You can lock the keypad so that it cannot be used accidentally while carrying it around. <ul style="list-style-type: none"> • In idle, press and hold to turn on the keypad lock and the icon will show up in the display. 	NOTE: You can still use to answer a call when the handset is ringing.

29

11. Technical details <table> <tr> <th>Technology</th><td>DECT</td></tr> <tr> <th>Caller identification</th><td>Dual: DTMF and FSK</td></tr> <tr> <th>Temperature range</th><td>Operation 0 °C to 40 °C Storage -20 °C to 60 °C</td></tr> </table>	Technology	DECT	Caller identification	Dual: DTMF and FSK	Temperature range	Operation 0 °C to 40 °C Storage -20 °C to 60 °C	12. Warranty for consumer products Thank you for purchasing this Motorola branded product manufactured under license by MDX ELECTRONICS LLC. What does this warranty cover? Subject to the exclusions contained below, MDX ELECTRONICS LLC warrants that this Motorola branded product or certified accessory sold for use with this product that it manufactured to be free from defects in materials and workmanship under normal consumer usage for the period outlined below. This warranty is your exclusive warranty and is not transferable. Who is covered? This warranty extends only to the first consumer purchaser, and is not transferable. What will MDX ELECTRONICS, LLC do? MDX ELECTRONICS LLC or its authorized distributor at its option and within a commercially reasonable time, will at no charge repair or replace any products or accessories that do not conform to this warranty. We may use functionally equivalent reconditioned / refurbished / pre-owned or new products, accessories or parts. What other limitations are there? ANY IMPLIED WARRANTIES, INCLUDING WITHOUT LIMITATION THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED TO THE DURATION OF THIS LIMITED WARRANTY, OTHERWISE THE REPAIR OR REPLACEMENT PROVIDED UNDER THIS EXPRESS LIMITED WARRANTY IS THE EXCLUSIVE REMEDY OF THE CONSUMER, AND IS PROVIDED IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OF IMPLIED. IN NO EVENT SHALL MOTOROLA OR MDX ELECTRONICS LLC, BE LIABLE, WHETHER IN CONTRACT OR TORT (INCLUDING NEGLIGENCE) FOR DAMAGES IN EXCESS OF THE THE PURCHASE PRICE OF THE PRODUCT OR ACCESSORY, OR FOR ANY INDIRECT, INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES OF ANY KIND, OR LOSS OF REVENUE OR PROFITS, LOSS OF BUSINESS, LOSS OF INFORMATION OR OTHER FINANCIAL LOSS ARISING OUT OF OR IN CONNECTION WITH THE ABILITY OR INABILITY TO USE THE PRODUCTS OR ACCESSORIES TO THE FULL EXTENT THESE DAMAGES MAY BE DISCLAIMED BY LAW.
Technology	DECT						
Caller identification	Dual: DTMF and FSK						
Temperature range	Operation 0 °C to 40 °C Storage -20 °C to 60 °C						

35

Redialling the last number You can redial any of the 5 last numbers called. If you have stored a name in phonebook to go with the number, the name will be displayed instead. The most recent last number will display at the top of the redial list.	Redialling a number from the redial list <ul style="list-style-type: none"> • In idle mode, press to access the redial list. NOTE: If the redial list entry shows a name, press to view the number of this entry. <ul style="list-style-type: none"> • Press to browse the redial list. • Press to dial to the selected redial number. NOTE: If there are no numbers in the redial list, the display shows EMPTY .
Finding a handset You can locate the handset by pressing the find key . All the handsets registered to the base will produce the paging tone and show PAGING on the display for 60 seconds. You can stop the paging by pressing on any handset or on the base again.	NOTE: If there is an incoming call during paging, the phone will ring with the incoming call instead of paging.
8. Private phonebook Each handset can store up to 20 private phonebook entries with names and numbers. Each phonebook entry can have a maximum of 20 digits for the phone number and 12 characters for the name. You can also select different ringtones for your phonebook entries. (Note that the different ringtones only play when you receive a call if you subscribe to caller display and the incoming number matches the stored number.) Phonebook entries are stored alphabetically by name.	

30

Some jurisdictions do not allow the limitation or exclusion of incidental or consequential damages, or limitation on the length of an implied warranty, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you may also have other rights that vary from one jurisdiction to another.	<table> <tr> <th>Products covered</th><th>Length of coverage</th></tr> <tr> <td>Consumer products</td><td>One (1) year since the day of the original purchase by the original first consumer.</td></tr> </table>	Products covered	Length of coverage	Consumer products	One (1) year since the day of the original purchase by the original first consumer.
Products covered	Length of coverage				
Consumer products	One (1) year since the day of the original purchase by the original first consumer.				
Exclusions Normal wear and tare Periodic maintenance, repair and replacement of parts due to normal wear and tear are excluded from coverage. Batteries Only batteries whose fully charged capacity falls below 80% of their rated capacity and batteries that leak are covered by this warranty. Abuse and misuse Defects or damage that result from: (a) improper operation, storage, misuse or abuse, accident or neglect, such as physical damage (cracks, scratches, etc.) to the surface of the product resulting from misuse; (b) contact with liquid, water, rain, extreme humidity or heavy perspiration, sand, dirt or the like, extreme heat, or food; (c) use of the products or accessories for commercial purposes or subjecting the product or accessory to abnormal usage or conditions; or (d) other acts which are not the fault of MOTOROLA or MDX ELECTRONICS LLC., are excluded from coverage. Use of non-Motorola branded products and accessories Defects or damage that result from the use of non-Motorola branded or certified products or accessories or other peripheral equipment are excluded from coverage. Unauthorized service or modification Defects or damages resulting from service, testing, adjustment, installation, maintenance, alteration, or modification in any way by someone other than Motorola, MDX Electronics or its authorized service centers, are excluded from coverage. Altered products Products or accessories with (a) serial numbers or date tags that have been removed, altered or obliterated; (b) broken seals or that show evidence of tampering; (c) mismatched board serial numbers; or (d) nonconforming or non-Motorola branded housings, or parts, are excluded from coverage. You will receive instructions on how to ship the products or accessories at your expense and risk, to a MDX Electronics, LLC authorized repair center when applicable. To obtain service, you must include: (a) the product or accessory; (b) the original proof of purchase (receipt) which includes the date, place and seller of the product.					

31

v2